

ROAD MAGNET

Performance Springs

Directions for trimming the Bump Stop

- 1. Remove original spring from strut. (*CAUTION !!! You must use a spring compressor to remove the load that is on the spring in strut assembly. Failure to do this may result in injury or death.*)**
- 2. When spring is free from strut, remove bump stop from the under the dust boot.**
- 3. Trim approximately $\frac{1}{2}$ to $\frac{3}{4}$ from bottom of Bump Stop leaving top to be reinstalled.**



- 4. Reassemble Bump Stop, Strut and spring, then reattach to vehicle.**

Note : Bump stops may vary from the model pictured above.

Note : Nissan B13 Springs Only

Front springs are shorter and heavier wire than the rear springs.